



Modification of Fahrenheit to Celsius



To convert the Inverter wireless remote control from Fahrenheit to Celsius, jumper number 5 would need to be removed.

Disclaimer:


In order to perform some of these tests an electrical and/or refrigerant license is required. We strongly advise to check the Service manual for more detailed explanation. If you are not sure about these recommendations please contact us at 866-952-8324.





Remove all screws from behind the remote control and open.



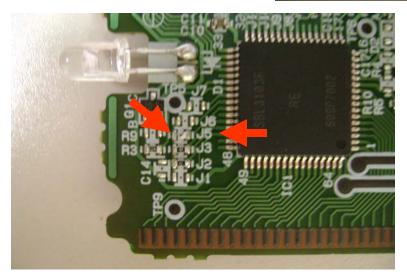

To make the conversion, remove the number 5 jumper from the remote's control board.

Reassemble in the reverse order.

Disclaimer:

In order to perform some of these tests an electrical and/or refrigerant license is required. We strongly advise to check the Service manual for more detailed explanation. If you are not sure about these recommendations please contact us at 866-952-8324.